


Date:

Project Name:


- MC-1** Recessed cabinet, right hand or left hand (reversible in the field)
MC-2 Surface-mounted cabinet, right hand or left hand (reversible in the field)

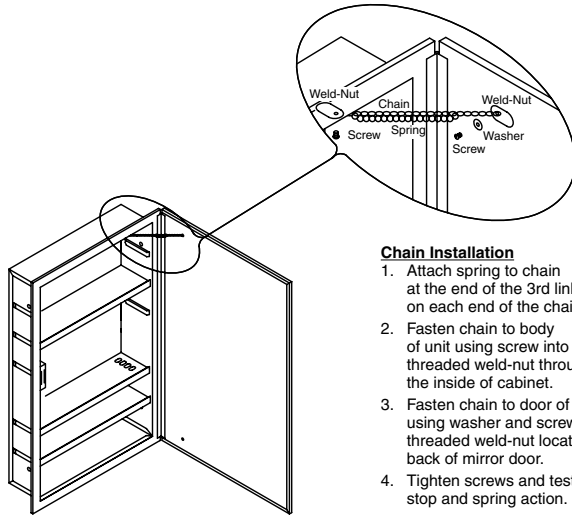

Chain Installation

1. Attach spring to chain at the end of the 3rd link on each end of the chain.
2. Fasten chain to body of unit using screw into threaded weld-nut through the inside of cabinet.
3. Fasten chain to door of unit using washer and screw into threaded weld-nut located on back of mirror door.
4. Tighten screws and test for stop and spring action.

Right hand view shown
for left handed unit rotate 180°

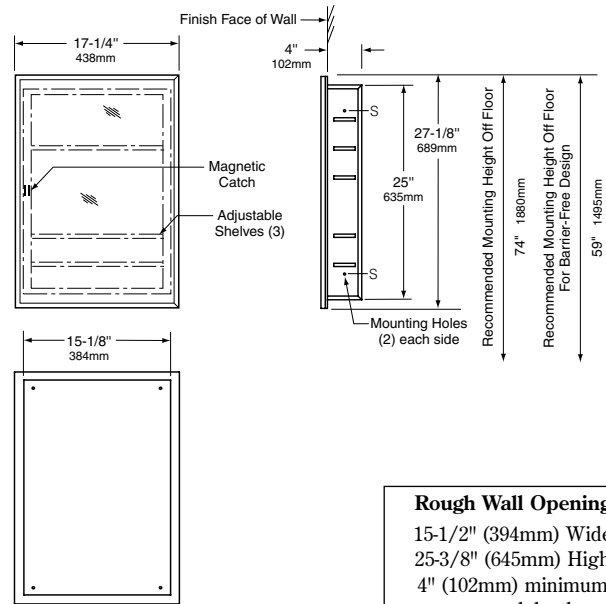

Rear View

Rough Wall Opening
15-1/2" (394mm) Wide
25-3/8" (645mm) High
4" (102mm) minimum
recessed depth

CONSTRUCTION:

Cabinet — Fabricated of 22-gauge (0.8mm) type 304 stainless steel. All welded construction with exposed surfaces having a #4 satin-finish.

Door — Fabricated of type 430 stainless steel with bright polish finish.

Mirror — 1/4" (6mm) plate/float glass with 15-year guarantee against silver spoilage.

Interior Shelves (3) — Fabricated of 22-gauge (0.8mm) stainless steel with satin finish; adjustable stainless steel shelves, one shelf having tooth brush cutouts.

INSTALLATION:

Provide framed wall opening. Recessed depth required from finished face of wall is 4" (102mm). Check plans and coordinate with mechanical engineer to avoid protrusion from opposite wall, pipe, conduits, electrical wiring etc. Place in framed wall opening and secure using #10 x 1-1/4" (32mm) Phillips flat head sheet metal screws provided by Gamco. If installing in plaster, recommend grounding. If installing where unit projects above top of wainscot, provide filler to prevent gap from finished wall and flange. If installing in block walls, use metal expansion shields.

OVERALL DIMENSIONS:

17-1/4" W x 27-1/8" H x 4-1/4" D (438 x 689 x 108mm). Shipping weight 33-lbs, cubic volume 1.30 cu. ft.

MOUNTING:

Mounting height shall be 74" (1880mm) to top of unit.

Recessed Stainless Steel Medicine Cabinet shall be Model _____ (insert model number) of Gamco Commercial Restroom Accessories, A Division of Bobrick, One Gamco Place, Durant, OK 74701-1910, Tel: 1-800-451-5766, Web: www.GAMCOUSA.com